

Volitelné hroty pro FM-2032

Jednotka: mm

T30-D06 Tvar-0.6D 	T30-D1 Tvar-1D 	T30-I Tvar-I 	T30-J Tvar-J 	T30-KU Tvar-KU 	T30-KN Tvar-KN
------------------------------	---------------------------	-------------------------	-------------------------	---------------------------	---------------------------

Volitelné hroty pro FM-2022

Jednotka: mm

ČIP

*1 sada: 2 ks

T16-1001 Čip 0.5I 	T16-1002 Čip 0.5C 	T16-1003 Čip 1L 	T16-1004 Čip 2L 	T16-1013 Čip 3L
------------------------------	------------------------------	----------------------------	----------------------------	----------------------------

SOP

T16-1005 SOP 6L 	T16-1006 SOP 8L 	T16-1007 SOP 10L 	T16-1008 SOP 13L 	T16-1009 SOP 16L
T16-1010 SOP 20L 	T16-1011 SOP 25L 	T16-1012 SOP 18L 		

Výměnné hroty for FM-2023

Jednotka: mm

ČIP

*1 sada: 2 ks

T9-I Čip I 	T9-L1 Čip 1L 	T9-L2 Čip 2L
-----------------------	-------------------------	-------------------------

Výměnné hroty pro FM-2030

Jednotka: mm

T22-BL Tvar-BL 	T22-BL2 Tvar-2BL 	T22-BC2 Tvar-2BC 	T22-C3 Tvar-3C 	T22-C5 Tvar-5C 	T22-C6 Tvar-6C
T22-D08 Tvar-0.8D 	T22-D12 Tvar-1.2D 	T22-D16 Tvar-1.6D 	T22-D24 Tvar-2.4D 	T22-D32 Tvar-3.2D 	T22-D45 Tvar-4.5D
T22-D52 Tvar-5.2D 	T22-J02 Tvar-0.2J 	T22-JD08 Tvar-0.8JD 	T22-K Tvar-K 		